SCOSCHE

SI2221B

IN-DASH INSTALLATION KIT FOR 2004-06 CHEVROLET AVEO & 2007-08 AVEO 5, 2004-06 SUZUKI FORENZA, 2005-06 SUZUKI RENO & 2004-05 SUZUKI VERONA

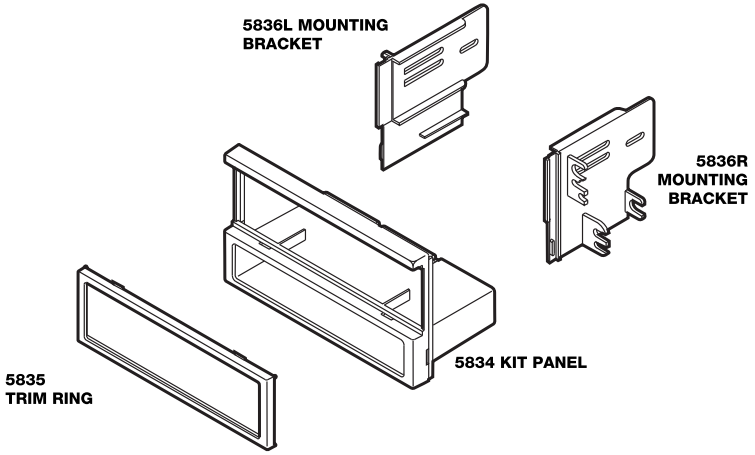

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2004-06 Chevrolet Aveo & 2007-08 Aveo 5, 2004-06 Suzuki Forenza, 2005-06 Suzuki Reno & 2004-05 Suzuki Verona vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

SI03B	**DO01B**
1996-Up Select Suzuki	1999-Up Select Suzuki & Chevrolet

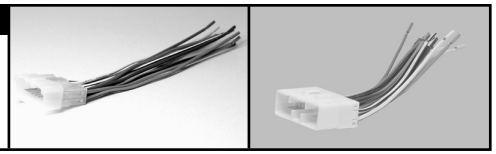

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (SI2221B) in 2004-06 Chevrolet Aveo & 2007-08 Aveo 5, 2004-06 Suzuki Forenza, 2005-06 Suzuki Reno & 2004-05 Suzuki Verona vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2008 SCOSCHE INDUSTRIES, INC.

ASSEMBLING THE KIT

ISO DIN MOUNT

1. Align right side ISO Mounting Bracket 5836R and left side ISO Mounting Bracket 5836L with kit panel 5834. Place mounting brackets with matching locating slots on kit panel (two locations on each side of mounting hole).
2. Align ISO DIN aftermarket stereo with assembled kit panel. Use hardware supplied with aftermarket stereo to 5836L/R.

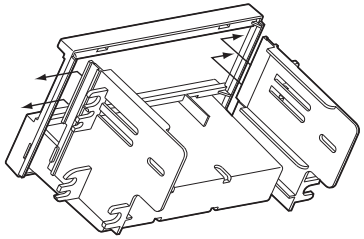

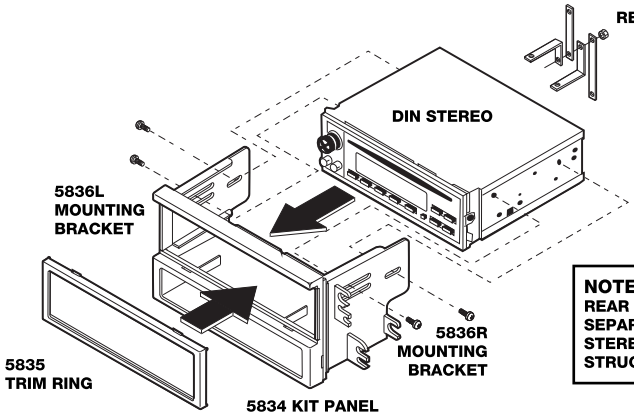

NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.

FACTORY STEREO REMOVAL

2004-06 CHEVROLET AVEO / 2007-08 CHEVROLET AVEO 5

1. Using a panel removal tool, remove both side trim pieces, one on each side of the radio and HVAC.
2. Extract (4) 10mm Philips head screws securing the stereo to the dash. Disconnect and remove.

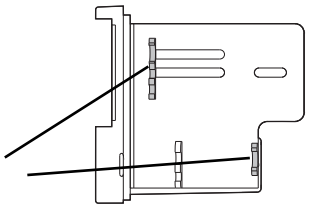

2004-06 SUZUKI FORENZA
2005-06 SUZUKI RENO

1. Remove temperature control cable located on left side of glove box under dash.
2. Remove AC vent controller cable under steering column on right side.
3. Using a panel removal tool, pry out dash panel surrounding stereo and AC controls.
4. Disconnect plugs and gently pull away.
5. Remove (4) Philips head screws, unplug stereo and gently lift away.

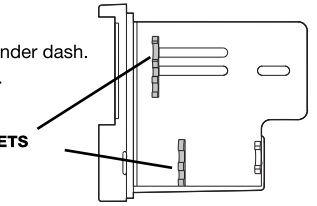

2004-05 SUZUKI VERONA

1. Using a panel removal tool, remove trim around the factory radio.
2. Extract (4) Phillips Head Screws, unplug radio and gently lift away.